

ACCUSPLIT. EAGLE

AE190XLGM

CERTIFIED ACCURATE PEDOMETER

Featuring Trip & Total Memories for Steps,
Activity Time, Distance and Calories.

Operating Instructions

Congratulations on taking the first step to wellness
with your purchase of an ACCUSPLIT
Certified Accurate Pedometer.
Just put the pedometer on and start walking!



ACCUSPLIT®, Inc.

7901 Stoneridge Drive, Suite 350
Pleasanton, CA 94588

800-935-1996 • 925-290-1900 • FAX 925-290-1930
www.ACCUSPLIT.com • support@ACCUSPLIT.com

Eat Right! Walk More! Live Well!
The ACCUSPLIT Lifestyle


INST REV D 190
060113

FUNCTIONS

- STEP Counter to 99,999 then rollover.
- GOAL Tracking (defaults to 3500 steps, settable from 0=OFF to 99,990 steps, in 100 step increments).
- Automatic Activity Timer for Step Activity, up to 999 Min 59 sec, then rollover.
- GOAL Tracking (defaults to 30 minutes, settable from 0=OFF to 999 min, in 1 minute increments).
- DISTANCE to 999.99 mi or km, then rollover.
- CALORIES to 9999.9 kcal, then rollover.
- Adjustable Step Filter (defaults to 1 step, settable from 0-5 steps) to increase step count accuracy.
- TRIP & TOTAL MEMORIES stores results and are independently resettable, TOTAL STEPs to 10 million and TOTAL TIME to 100,000 Hours, TOTAL DISTANCE to 100,000 mi/km and TOTAL CALORIES 100,000 kcal.
- GOAL Tracking shown as % of Goal in 5% increments by bars at the bottom of the display.
- Clock

FEATURES

- Built around the Kato-designed JW200 PedometerEngine™ Step Sensor, the current gold standard for accuracy.
- Extra Large Digits.
- The ACCUSPLIT exclusive case makes this the slimmest available pedometer built around the JW200 Step Sensor.
- Chromed, Spring Steel clip resists breakage.
- Case includes two leash slots, for attaching safety leash on either side.
- Made from tough polycarbonate plastic.

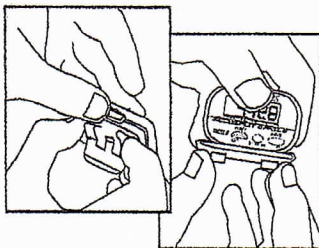

HOW TO OPEN YOUR PEDOMETER

The cover must be closed for the pedometer to work.

VIEWING YOUR RESULTS

Once you put on your pedometer with the cover closed, it will automatically begin to record your steps and other activity results.

Press the MODE button to cycle through the display modes:


- STEP: shows step count.
- TIMER: AUTO ACTIVITY TIMER shows cumulative activity time.
- DISTANCE: shows computed distance.
- CALORIES: shows computed calories.
- TIME: shows time of day.

All (but TIME) of the above also display progress towards user-defined goal as 5% bars across the bottom of the display.

WEARING YOUR PEDOMETER

Gently slide the pedometer onto your belt or the top edge of your pants or skirt. It should fit snugly and level, above one knee, nearest to a hip bone. The strong steel clip makes it easy.

Note: The pedometer should be as vertical as possible. Walkers with larger stomachs may find it helpful to wear the pedometer farther back on the body, toward one hip.

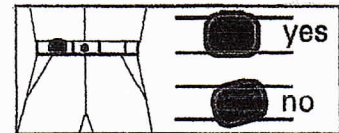

ACTIVATING THE BATTERY PROPERLY

To properly activate the battery system

- 1) remove any plastic tab "interrupting" the battery, if that has not been done, then
- 2) perform a "3-button POWER RESET" by using the 3-button side of the enclosed, plastic tool or your fingers to simultaneously Push and Hold all 3 buttons until the display goes blank, then release. All segments will be displayed for a second and then "0".

RESETTING YOUR RESULTS

Resetting all TRIP Memories

Most people prefer to reset counts daily. To reset your regular counts (Trip Memories): From any function mode, press and hold the yellow RESET button for at least 2 seconds. You'll see the values all go back to zero. The TOTAL memories are not changed.

Resetting all TOTAL and TRIP Memories

To reset your TOTAL Memories (which always resets TRIP Memories), press **[M]** button for Total Memory Recall Mode. Then, Press and hold the yellow RESET button for at least 2 seconds to clear ALL TOTAL and TRIP memories.

Your pedometer is preset with standardized settings that allow you to use it now! You can customize the settings later.

CHOOSING GOALS

This unit can store your personal goals for steps, activity time, distance and calories during step activity. The default values are 3,500 steps, 30 minutes of activity time, 1 mile/km, and 100 calories. Choose goals to fit your current activity level.

GOAL TRACKING

When viewing Steps and other measures, you will see the results in the display, and also the percentage progress towards your Goal on the bottom of the display, shown as a series of 20 small bars appearing on the bottom of the display, with each bar representing 5% of the total.


TOTAL vs. TRIP MEMORIES

The TRIP memories are displayed in normal operating mode, and can be reset whenever you want, just like the Trip odometer on cars.

The TOTAL Memories keep track of your progress over a long period of time. You may wish to reset your total memories once per week, per month, per year, or never! It can be fun to see how many steps or how much distance you walk in a long period of time.

As steps are taken, the pedometer increases the step count for both Trip and Total memories simultaneously. Activity Time, Distance and Calories are counted automatically whenever steps are being counted.

Press the MEMORY button ("M") to display TOTAL memories. The "T" icon for "TOTAL" disappears when displaying TRIP memory values. In Total Step Memory, the unit displays Steps ÷ 1,000, so that up to 10,000,000 steps is shown as 9999.9. Activity Time is displayed in Hours, up to 100,000 as 99999. Distance is displayed in Miles or Km, up to 100,000 as 99999. Calories are displayed in kcal, up to 100,000 as 99999.

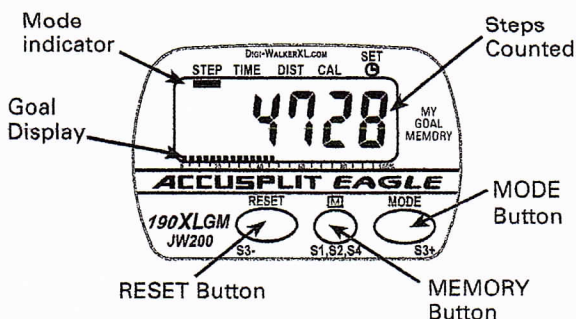


SETTING PROCEDURE

ACCUSPLIT products use a common setting procedure known as "S1- S2-S3-S4." Here's how it works:

- Press S1 for 2 seconds: Enter the SET mode
- Press S2: Change the field to be set
- Press S3: Change the field value
- Press S4 for 2 seconds: Exit the SET mode

You can enter and exit Set mode from any of the regular display screens. Once in Set mode, you can cycle through all of these settings by Pressing S2 repeatedly.

We recommend that you adjust the settings all at once, using the following procedure.

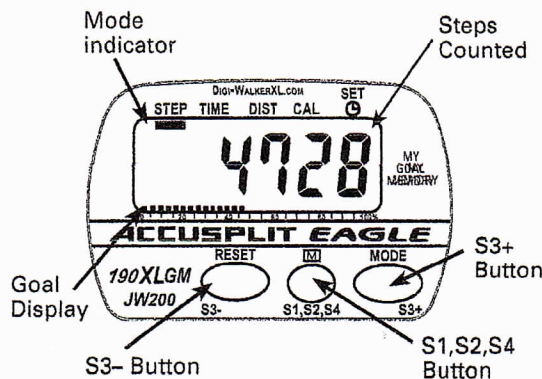

Entering Set Mode and Setting Goals and Stride Length and Weight

1. Repeatedly Press the MODE button until the display shows a line underneath the word on the label representing the function Goal you want to set.
2. Press and Hold the S1 button for 2 seconds. The current goal display will start to flash, showing that you've entered SET mode. You'll also notice the "G" indicator has come on, indicating that you are ready to set your Goal.
3. Press the S3+ button to increase the Goal value. Press the S3- button to decrease the Goal value. Hold the buttons down to change values quickly.
4. Press the S2 button to select the next setting: Step Goal, Activity Time Goal, Distance Goal, Stride Length, Calorie Goal, Weight, Clock Hours, Minutes and Seconds.

Exiting Set Mode

Press and Hold the S4 button for 2 seconds. The unit will exit setting mode – no values will be flashing anymore. Note: The unit will save any changes and exit set mode after 30 seconds unattended.

CHANGING STEP FILTER SETTING and UNITS OF MEASURE

While the JW200 PedometerEngine™ Step Sensor is the benchmark for accuracy, some people like to have the ability to fine tune a filter. Therefore, the unit has a variable setting step filter, to allow fine-tuning to your specific preferences. You can set the value to any value from 0-5 steps. For example, if the filter is set to "3", the unit will wait to start counting steps until more than three steps have been taken in less than five seconds.

Your pedometer can compute and display results in English (default) or Metric units of measure.

Press and Hold S1 for over 4 seconds to Enter the Deep SET Mode. The display will show a flashing step filter value between 0 and 5.

- Press S3+ or S3- to change the step filter setting.
 - Press S2. The display will show a flashing "US" or "EU" representing English or Metric unit of measure.
 - Press S3+ to change from one to the other.
 - Press and Hold S4 for 2 seconds to exit Deep Set Mode.
- Note: The unit will save any changes and exit set mode after 30 seconds unattended.



For comprehensive instructions including instructional videos, registration, warranty details, go to www.accusplit.com/support or scan QR code.